 


## jetmail Ink Replacement Instructions

The jetmail will remind you that the ink cartridge should be exchanged. Please follow the instructions below to replace your ink cartridge.

 
### To change the ink cartridge:

- Open the inking system flap.

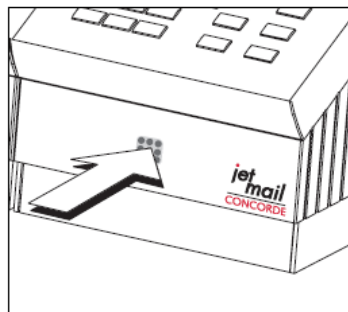

Press the marking on the flap.

- Remove used ink cartridge.

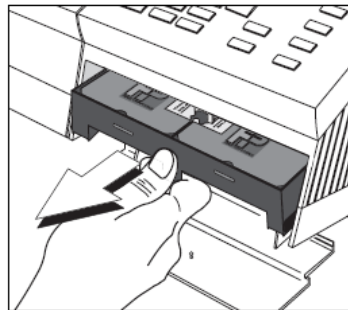

Hold ink cartridge by the center pin and pull out.

Keep ink cartridge sockets up.



**Caution!** Keep ink cartridge sockets up, to avoid leakage!

- Use the two sealing caps delivered with the ink cartridge to seal the two ink cartridge sockets.
- Place ink cartridge into plastic bag and carton wrapping immediately upon removal.




**Warning! Danger of injury!** Do not touch inside the empty ink compartment. You may sustain injury from the needles.



**Warning!** Please refer to notes on the ink cartridge for correct handling and disposal.

### Insert a new ink cartridge ...

 
- Take the ink cartridge out of the package.
- Check to make sure the punch code on the rear of the new ink cartridge is identical to the punch code on the back of the old ink cartridge.

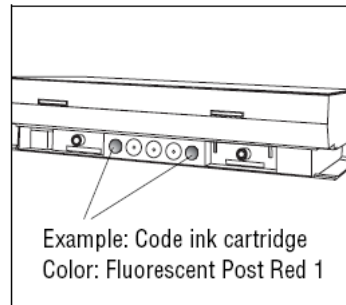

The punch code on the reverse of the ink cartridge serves to prevent any accidental confusion.

Example: Ink cartridges filled with “Fluorescent Post Red 1” ink always feature the punch code as depicted in the illustration.

 - Insert ink cartridge.

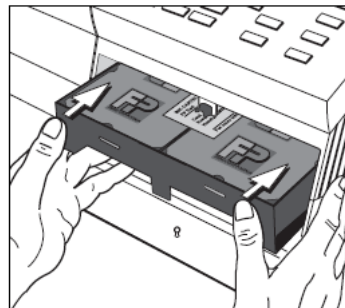

Insert ink cartridge into the lateral guide. Insert cartridge with gentle even pressure until it clicks.

If correctly inserted, the message NO INK CARTRIDGE INSERTED! PLEASE INSERT INK CARTRIDGE! disappears.

- Close the inking system flap.



We recommend keeping a spare ink cartridge.