

optimail Teleset Re-Crediting Instructions



Overview


Teleset re-crediting is the loading from your FP Teleset account onto your franking machine. This involves the machine dialing up to the FP Teleset server via your analogue telephone line. The franking machine then requests the amount you specified and transfers the funds securely to your **optimail** franking machine.

Re-crediting requirements

- As mentioned above, you require an analogue telephone line.
- You must have funds available on your FP Teleset account ready for downloading.
- You must download your postage funds in £10 increments. i.e. £10, £20, £50, £100. (Re-crediting of £56 for example is not possible)
- The minimum amount for download is £10.
- The maximum amount for download is £9990.

Re-crediting Instructions

1. Ensure your **optimail** franking machine is connected to the analogue telephone socket.
2. Power on your **optimail** and wait for the startup tests to complete.
3. Insert your 8-digit customer specific "Pin" number and press 
4. Now type the amount you wish to download (In multiples of £10)
5. Press the  button.
6. The machine will start counting from 3 to 6. Once the number displayed reaches 6, your postage download is complete.

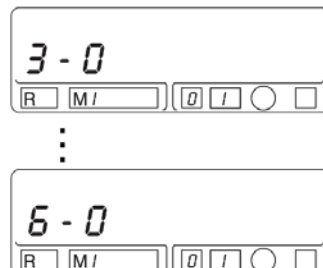

...Establish connection

...Data exchange

...New postage loaded!